



Noktasal Otomatik Yağlama Çözümleri

VISIO Serisi




VISIO VISIO PRO

MEMOLUB VISIO SERIES KNOWLEDGE BASE


Ref. IDs: 6300, 6311, 6312, 6313, 6321, 6322, 6323, 1620,
6317, 6327

DIMENSIONS


120CC
Grease & Oil
120cc | 4oz

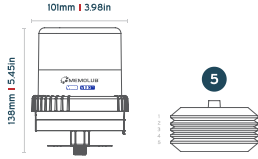


240CC
Grease & Oil
240cc | 8.1oz

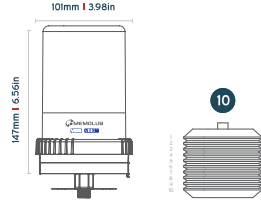

480CC
Grease & Oil
480cc | 16.2oz

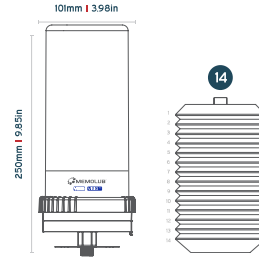

OIL R-500
Refillable Oil Reservoir
500cc | 16.9oz

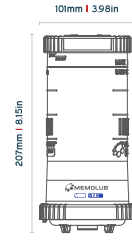

PRECAUTIONS

- Do not open the housing: loaded spring
- Hold MEMOLUB® down during manual checks
- Leq <70 dB
- Use MEMOLUB® only for greasing machinery
- Use only lubricant cartridges and batteries recommended by the manufacturer



SETTINGS & FEEDBACK

FREQUENCY SETTINGS

2ND GENERATION (SERIAL NUMBERS VIS-XX-XXXX & VPR-XX-XXXX)					
WHEEL POSITION	DOSING PERIODICITY	MAX. DAILY OUTPUT*	REFILLING FREQUENCY VS. CARTRIDGE CONTENT (120CC)	REFILLING FREQUENCY VS. CARTRIDGE CONTENT (240CC)	REFILLING FREQUENCY VS. CARTRIDGE CONTENT (480CC)
0**	External (PLC)				
1	48 hours	0.3 cc/day	12 months	24 months***	48 months***
2	24 hours	0.6 cc/day	6 months	12 months	24 months***
3	16 hours	0.9 cc/day	4 months	8 months	16 months***
4	12 hours	1.2 cc/day	3 months	6 months	12 months
5	8 hours	1.8 cc/day	2 months	4 months	8 months
6	6 hours	2.4 cc/day	1.5 month	3 months	6 months
7	4 hour	3.6 cc/day	1 month	2 months	4 months
8	2 hour	7.2 cc/day	0.5 month	1 month	2 months
9	1 hour	14.4 cc/day	0.25 month	0.5 month	1 month

*Maximum daily output without stroke washers.

** Only available on Memolub Visio Pro models.

*** Please consider lubricant expiry date for long cartridge lifetimes.

1ST GENERATION (All other serial numbers)					
WHEEL POSITION	DOSING PERIODICITY	MAX. DAILY OUTPUT*	REFILLING FREQUENCY VS. CARTRIDGE CONTENT (120CC)	REFILLING FREQUENCY VS. CARTRIDGE CONTENT (240CC)	REFILLING FREQUENCY VS. CARTRIDGE CONTENT (480CC)
0**	External (PLC)				
1	24 hours	0.6 cc/day	6 months	12 months	24 months***
2	16 hours	0.9 cc/day	4 months	8 months	16 months***
3	12 hours	1.2 cc/day	3 months	6 months	12 months
4	8 hours	1.8 cc/day	2 months	4 months	8 months
5	4 hours	3.6 cc/day	1 month	2 months	4 months
6	2 hours	7.2 cc/day	0,5 month	1 month	2 months
7	1 hour	14.4 cc/day	0,25 month	0,5 month	1 month
8	1/2 hour	28.8 cc/day	4 days	0,25 month	0,5 month
9	1/4 hour	57.6 cc/day	2 days	4 days	0,25 month

* Maximum daily output without stroke washers.

** Only available on Memolub Visio EP models

VOLUME SETTINGS [CM³/DAY]

2ND GENERATION (SERIAL NUMBERS VIS-XX-XXXX & VPR-XX-XXXX)

By using stroke washers you can adjust the amount of lubricant discharged per pumping cycle.

NUMBER OF STROKE WASHERS	WHEEL POSITION									
	0	1	2	3	4	5	6	7	8	9
-	External (PLC)	0.3	0.6	0.9	1.2	1.8	2.4	3.6	7.2	14.4
C		0.28	0.56	0.84	1.12	1.7	2.2	3.4	6.7	13.5
○ + C		0.26	0.52	0.79	1.04	1.62	2.1	3.15	6.3	12.6
2 ○ + C		0.24	0.49	0.73	0.98	1.46	1.95	2.92	5.85	11.7
3 ○ + C		0.22	0.45	0.67	0.9	1.35	1.8	2.7	5.4	10.8
4 ○ + C		0.2	0.41	0.62	0.82	1.23	1.65	2.47	4.95	9.9
5 ○ + C		0.18	0.37	0.55	0.74	1.1	1.5	2.2	4.5	9
6 ○ + C		0.17	0.34	0.5	0.68	1	1.35	2.02	4.05	8.1

*The circlip must always be added on top of the washers.

💡 The circlip must always be added on top of the washers.

1ST GENERATION (All other serial numbers)




By using stroke washers you can adjust the amount of lubricant discharged per pumping cycle.

NUMBER OF STROKE WASHERS	WHEEL POSITION									
	0	1	2	3	4	5	6	7	8	9
-	N/A	0.6	0.9	1.2	1.8	3.6	7.2	14.4	28.8	57.6
C		0.56	0.84	1.12	1.69	3.4	6.7	13.5	27	54
○ + C		0.52	0.79	1.04	1.58	3.15	6.3	12.6	25.2	50.4
2 ○ + C		0.49	0.73	0.98	1.46	2.92	5.85	11.7	23.4	46.8
3 ○ + C		0.45	0.67	0.9	1.35	2.7	5.4	10.8	21.6	43.2
4 ○ + C		0.41	0.62	0.82	1.24	2.47	4.95	9.9	19.8	39.6
5 ○ + C		0.37	0.56	0.74	1.1	2.2	4.5	9	18	36
6 ○ + C		0.34	0.51	0.68	1	2.02	4.05	8.1	16.2	32.4





VISUAL FEEDBACK

2ND GENERATION (SERIAL NUMBERS VIS-XX-XXXX & VPR-XX-XXXX)

COLOR	STATUS
-------	--------

COLOR	STATUS
	The testrun has been activated through pushbutton . / The pumping cycle ran successfully.
	Battery low / Lubricant cartridge empty.
	The gearbox/motor is damaged or broken. / The pipe may be clogged.

1ST GENERATION (All other serial numbers)

COLOR	STATUS
	The gearbox motor is damaged or broken. The tube might be clogged.
	The battery is low.
	Abnormal temperature is detected or there is an issue with the pump.
	The testrun activation via the touchpad was successful.





REMOTE INSTALLATION DISTANCES

TYPE OF INSTALLATION	MAXIMUM DISTANCE*
Single point	8m
Multipoint with 2 outlets	6m
Multipoint with 4 outlets	
Multipoint with 6 outlets	
Multipoint with 8 outlets	
Multipoint with 10 outlets	Contact your distributor.
Multipoint with 12 outlets	




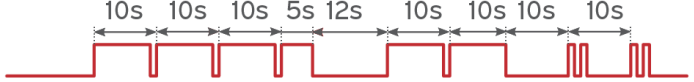
*The maximum distances are valid for a variety of lubricants, both oils and greases with a viscosity level up to NGLI2.

REMOTE CONTROL

INTERMITTENT MODE

MEMOLUB VISIO PRO	
DESCRIPTION	SIGNAL
INPUT SIGNAL (FROM CUSTOMER PLC/TIMER)	$5s < t_i < 17s$, $V_i = 24Vdc$ 
OUTPUT SIGNAL "BUSY" (TO CUSTOMER PLC)	$17s$ 
PUMP OUTLET (TO LUBRICATION)	$P_{max} = 25bars$, $V = 0.6cc$ 
OUTPUT SIGNAL "DEFAULT" (TO CUSTOMER PLC)	$10s$ $10s$ $10s$ 

CONTINUOUS MODE

MEMOLUB VISIO PRO	
DESCRIPTION	SIGNAL
INPUT SIGNAL (FROM CUSTOMER PLC/TIMER)	$V_i = 24Vac/dc$ 
OUTPUT SIGNAL "BUSY" (TO CUSTOMER PLC)	$17s$ 
PUMP OUTLET (TO LUBRICATION)	$P_{max} = 25bars$, $V=0.6cc$ 
OUTPUT SIGNAL "DEFAULT" (TO CUSTOMER PLC)	$10s$ $10s$ $10s$ $5s$ $12s$ $10s$ $10s$ $10s$ $10s$ 

CABLE

MEMOLUB VISIO PRO

The Memolub Visio Pro is delivered with a 6 DIN x 0.25 cable with a female connector.

DESCRIPTION	
1. STATUS OUTPUT - (TO PLC IN)	
2. STATUS OUTPUT + (TO PLC VCC)	
3. POWER SUPPLY + (12/24VAC/DC)	
4. EXTERNAL INPUT IN + (FROM PLC OUT)	
5. EXTERNAL INPUT IN - (FROM PLC GND)	
6. POWER SUPPLY - (0VDC)	

SPECIFICATIONS

ELECTRIC SPECIFICATIONS

	MEMOLUB VISIO	MEMOLUB VISIO PRO
Power Source	Battery	External
Voltage	4.5V DC (3x1.5V DC AA)	24V
PLC Connection	N/A	YES
Short circuit protection	Yes	
Stroke duration	8 seconds	
Minimum stroke interval	15 minutes	

INSTALLATION GUIDELINES

DIRECT INSTALLATION MEMOLUB VISIO + MEMOLUB VISIO PRO (2nd GENERATION)

DIRECT INSTALLATION MEMOLUB VISIO + MEMOLUB VISIO EP (1st GENERATION)

REMOTE INSTALLATION MEMOLUB VISIO + MEMOLUB VISIO PRO (2nd GENERATION)

REMOTE INSTALLATION MEMOLUB VISIO + MEMOLUB VISIO EP (1st GENERATION)

MULTIPOINT INSTALLATION MEMOLUB VISIO + MEMOLUB VISIO PRO (2nd GENERATION)

MULTIPOINT INSTALLATION MEMOLUB VISIO + MEMOLUB VISIO EP (1st GENERATION)

CHECK FUNCTION

2ND GENERATION

1ST GENERATION

REFILL GUIDELINES

CARTRIDGES

FAQ

Nothing happens after screwing the module on the base.

- The pin of the module is possibly not proper aligned with the notch of the base. Unscrew the module from the base, align correctly and screw it again.
- Memolub VISIO Series is not tightly screwed to the memo. Turn it clockwise until stop.
- There is possibly no battery inside the module. Insert 3x 1,5 VDC AA batteries to resolve the issue.
- There is possibly something obstructing the communication between the base and the module contacts. Unscrew the module from the base, remove any dust or obstacles from the base and the module contacts and screw back together tightly.

The touchpad does not work after initialisation was completed successfully.

Your Memolub VISIO Series possibly initialised in an unstable environment. Unscrew the base from the module and screw again to reset the system. Wait until one expulsion is performed and you observe green lights, indicating the initialization is complete.

The red lights are blinking periodically.

- There is possibly a too high back pressure present in the system. Inspect your downstream piping to remove any clogging or jam. Activate the touchpad and check for at least 2 expulsions if the systems operate fine.
- There is possibly something obstructing the communication between the base and the module contacts. Unscrew the module from the base, remove any dust or obstacles from the base and the module contacts and screw back together tightly.
- The motor is broken. Replacement of the module is necessary.






The yellow lights are blinking periodically.

- There is possibly something obstructing the communication between the base and the module contacts. Unscrew the module from the base, remove any dust or obstacles from the base and the module contacts and screw back together tightly.
- The batteries are empty. Replacement of the battery pack is necessary.

The blue lights are blinking periodically.

- The cartridge is possibly out of grease. Replacement of the cartridge is necessary.
- The system is not primed. Prime the system using a manual grease pump.
- The system is operating out of its minimum and maximum temperature range. Please make sure the system is operating within the recommended temperature range.

REGULATORY INFORMATION

SYMBOL	DESCRIPTION
	This product is compliant with Directives 2006/42/EC (Machinery). The relevant Declaration of Conformity is available here [https://memolub.eu/assets/uploads/Support/Visio/DoC-CE-VISIO-HPS-2023.pdf].
	This product is compliant with UK regulations 2008 No. 1597 (Supply of Machinery). The relevant Declaration of Conformity is available here [https://memolub.eu/assets/uploads/Support/Visio/DoC-UKCA-VISIO-HPS-2023.pdf].
	This product is compliant with customs union technical regulation TR CU 010/2011 (safety of machines and equipment). The relevant Declaration of Conformity is available here [https://memolub.eu/assets/uploads/Support/Visio/DoC-EAC-VISIO-HPS-2023.pdf].
	The WEEE symbol is attached to the product in compliance with the EU directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.
	The packaging material can be recycled. Please arrange for the environmental appropriate disposal of the packaging.

Povver Pnömatik Proses A.Ş.

İkitelli OSB Bedrettin Dalan Bulvarı
Vip Plaza A Blok Kat:2 No:41
Başakşehir/İstanbul
+90 212 293 88 70
info@povverpnomatik.com.tr
www.povverpnomatik.com.tr

